1-877-919-JEEP www.ironrockoffroad.com

03-06


☐ T-case linkage U-bracket 88137 (1)

TJ T-Case Linkage Relocation

Parts Checklist:

97-02

☐ T-case linkage U-bracket 88135 (1)

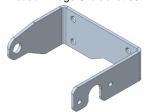

T-case linkage relocation plate 88134 (1)

#119 - Transfer Case Linkage Relocation Bracket (1)

- ☐ 1/4-20 x 3/4 splined carriage bolt (3)
 - ☐ 1/4 USS washer (3)
 - ☐ 1/4-20 hex nut (3)
 - ☐ 1/4-20 x 3/4 thread cutting screw (2)
 - ☐ Linkage bushing 53004810 (1)

Before you begin:


- Read all safety warnings.
- Read and understand installation instructions.
- ☐ Check all shift components for wear and replace as needed.
- Contact Iron Rock Off Road with any questions before, during, or after installation.
- Ensure that all parts are present and in good condition using the included shipping checklist.

Be sure you have the following tools and supplies:

- Floor jack
- Basic hand tools
- Angle grinder with cut off wheels or Sawzall

Installation:

- 1. Locate transfer case linkage u-bracket, mounting plate, and hardware kit 119 (figure 1).
- 2. Install splined carriage bolts into flat plate from the backside into the lower set of holes. Use a press, bench vice, or hammer to press them in.
- 3. Disconnect both transfer case linkage rods from the pivot arm. Use a pry bar to pop the linkage out of its bushings. Disconnect all linkage from the pivot arm and remove pivot arm from its mounting brackets.
- 4. Install the pivot arm into the provided u-shaped bracket using the new bushing and thread cutting screws. Tighten screws.
- 5. Remove the 2 nuts that hold the linkage bracket to the transfer case and remove bracket. Install the new flat plate in its place (fig 2). Tighten nuts.
- 6. Remove factory linkage bracket from body tub. Cut above the lower bolts (using a Sawzall or abrasive wheel) and the bracket will slide out without removing the bolts. Leave the rubber mounts in place.
- 7. Bolt the u-bracket to the flat plate using a washer under each nut. Tighten nuts.
- 8. Connect all linkage rods at this time. Adjust primary linkage rod so that transfer case will reach all positions without binding. Be sure there is a little bit of extra travel, or wiggle room, beyond the front and rearmost positions (2 high and 4 low).

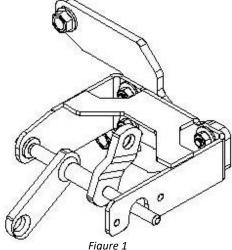

Transfer Case



Figure 2
Transfer Case Linkage Installed