

IRON ROCK OFF ROAD

ZJ 7" ROCK-LINK PRO
Instructions:
I-877-919-JEEP www.ironrockoffroad.com

Parts Checklist:

- ☐ Rock-Link decal 13287 (2)
- ☐ Ironrockoffroad.com decal (1)
- ☐ 7" front spring 96011 (2)
- ☐ 7" rear spring 96012 (2)
- ☐ Double shear track bar bracket 91015 (1)
- ☐ Rear sway bar link #007 (2)
- ☐ ZJ brake line set 10207 (1)
- ☐ Drop pitman arm (XJ5ARM) (1)
- ☐ Front sway bar link 11.25" (92147) (2)

#268 – Sway Bar Disconnect Bushings (1)

- ☐ Poly Bushing 94025 (4)

#286 – ZJ Sway Bar Disconnect Hardware (1)

- ☐ Disconnect Pin 94028 (2)
- ☐ 1/2-20 x 1" Hex Bolt, gr8 (2)
- ☐ 1/2 F436 Hard Washer (2)
- ☐ 1/4" x 1-1/4" Spring Lynch Pin (2)
- ☐ 12mm bolt sleeve 92038 (2)
- ☐ M12 x 60 hex bolt, cl10.9 (2)
- ☐ M12 hex nut, cl10.9 (2)
- ☐ M10 x 30 hex bolt, cl10.9 (2)
- ☐ 3/8" USS washer (2)
- ☐ M10 hex nut, cl10.9 (2)
- ☐ U-Bracket 99000 (2)



#33 - Shock Relocation Hardware (1)

- ☐ Front BPE shock relocation bracket 91022 (2)
- ☐ 3/8" x 1-1/4" hex bolt, gr8 (4)
- ☐ 3/8" nylock hex nut, gr8 (4)
- ☐ M10x60 hex bolt, cl10.9 (2)
- ☐ M10 hex nut, cl10.9 (2)
- ☐ 10mm shock sleeve 404969 (2)
- ☐ 3/8" flat washer (4)

#128 – Front Coil Spring Retainer (1)

- ☐ 3" bump stop spacer MB03 (2)
- ☐ M10 x 100 hex bolt (2)
- ☐ 3/8 USS washer (2)

#274 – ZJ Rear Shock Spacer Hardware (1)

- ☐ Spacer 99170 (2)

Front 3-Link Box 1: 13321 (1)

- ☐ Front Subframe center 99110 (1)
- ☐ Front Subframe left outer 99099 (1)
- ☐ Front Subframe right outer 99106 (1)
- ☐ ZJ T-case drop spacer 99003 (2)
- ☐ 4 hole to 2-hole adapter bracket 99117 (1)

#180 3-Link Long Arm Subframe Hardware (1)

- ☐ M14 x 2.0 x 90 hex bolt class 10.9 (1)
- ☐ M14 x 2.0 x 110 hex bolt class 10.9 (2)
- ☐ 7/16-14 x 1 1/4 hex bolt grade 8 (8)
- ☐ M10 x 1.5 x 80 hex bolt class 10.9 (1)
- ☐ M10 x 1.5 X 25 carriage bolt (4)
- ☐ M10 x 1.5 x 50 carriage bolt (4)
- ☐ M10 x 1.5 x 30 flange bolt class 10.9 (8)
- ☐ M14 x 2.0 nylock flange nut class 10 (2)
- ☐ 7/16-14 flange nut, zinc (8)
- ☐ M10 x 1.5 hex nut class 10 (4)
- ☐ M10 x 1.5 nylock flange nut class 10 (1)
- ☐ 9/16 F436 hardened washer (5)
- ☐ 3/8 USS washer (9)
- ☐ 7/16 F436 hardened washer (8)

Front LCA Box: 15783 (1)

- ☐ ZJ Long LCA Left 85107B (1)
- ☐ ZJ Long LCA Right 85108B (1)
- ☐ Angled Long Arm Male End 91109 (2)

Front UCA Box: 13488 (1)

- ☐ ZJ 3-Link Front UCA 91205 (1)
- ☐ 2-3/8 UCA Male End 91191 (1)

#127 - 2-5/8" 6 Bolt IRO Flex End Hardware (2)

- ☐ Inner race 91118 (2)
- ☐ Thrust washer 91119 (2)
- ☐ 2-5/8" Flex End Ball 91117 (1)
- ☐ 10-32 x 1-3/4" Socket Head Cap Screw (6)
- ☐ 10-32 Nylock Nut (6)
- ☐ 90 Degree 1/4"-28 Grease zerk Fitting (1)

#168 - 2-3/8" Flex End Hardware (1)

- ☐ End cap 91138 (2)
- ☐ Inner race 91139 (2)
- ☐ Flex end ball 91140 (1)
- ☐ 8-32 x 1-1/2" socket head cap screw (8)
- ☐ 1/4"-28 90° grease zerk fitting (1)
- ☐ 1/4"-28 straight grease zerk fitting (1)

#181 - 3-Link Control Arm Clamping Hardware (1)

- ☐ 1/4"-28 x 1-1/8" socket head cap screw (4)
- ☐ 3/8-16 x 1 1/4" hex bolt grade 8 (1)
- ☐ 1/4"-28 hex nut, grade 8 (4)
- ☐ 3/8-16 nylock flange nut (1)
- ☐ 3/8 Mil Spec. washer 95229A480 (1)

Rear 4-Link Parts

Rear Subframe 14720 (1)

- ☐ 4-Link Crossmember 99118 (1)
- ☐ 3/16" steel brake line tubing (5 feet)

#47 - Rear Coil Spring Retainer Hardware (1)

- ☐ 3" coil spring retainer MB03 (2)
- ☐ 3/8" x 4" carriage bolt (2)
- ☐ 3/8" USS washer (2)
- ☐ 3/8" hex nut, gr8 (2)
- ☐ ZJ rear coil spring retainer washer 99052 (2)
- ☐ ZJ rear coil spring retainer carriage bolt insert 99046 (2)

#65 - Adjustable LCA Clamping Hardware (2)

- ☐ 1/4"-28 x 1-1/8" socket head cap screw (4)
- ☐ 1/4"-28 hex nut, grade 8 (4)

#127 – 2-5/8" IRO Flex End Hardware (2)

- ☐ 2-5/8" flex end race 91118 (2)
- ☐ Thrust washer 91119 (2)
- ☐ 2-5/8" flex end ball 91117 (1)
- ☐ #10-32 nylock nut (7)
- ☐ #10-32 x 1-3/4" socket head cap screw (6)
- ☐ 90° 1/4"-28 grease zerk fitting (1)

#147 - Rear Brake Line hardware (1)

- ☐ 3/16" brake line flare nut (4)
- ☐ 7/16 x 1.25 grade 8 hex bolt (1)
- ☐ 7/16-14 grade 8 hex nut (1)

#168 - 2-3/8" Flex End Hardware (4)

- ☐ End cap 91138(2)
- ☐ Inner race 91139 (2)
- ☐ Flex end ball 91140 (1)
- ☐ 8-32 x 1-1/2" socket head cap screw (8)
- ☐ 1/4-28 90° grease zerk fitting (1)
- ☐ 1/4-28 straight grease zerk (1)

#171 - Control Arm Hardware (1)

- ☐ M14 x 95 hex bolt class10.9 (4)
- ☐ M14 x 100 hex bolt class10.9 (4)
- ☐ M14 nylock flange nut class 10.9 (8)
- ☐ 9/16" USS hardened washer (8)

#174 - Subframe Hardware (1)

- ☐ 2-hole nut plate 92097 (4)
- ☐ 7/16-14 x 1-1/4" hex bolt, grade 8 (8)
- ☐ 7/16" F436 washer (8)

Rear 4-Link UCAs 14713 (1)

- ☐ Rear long UCA 91184 (2)
- ☐ 2-3/8" flex end male end 91191 (2)
- ☐ Long Arm Male End; Angled 91109 (2)

Rear 4-Link LCAs 15703 (1)

- ☐ Left rear long LCA 91185 (1)
- ☐ Right rear long LCA 91186 (1)
- ☐ Double adjustable track bar 92305 (1)
- ☐ Double adjustable track bar male end 92297 (1)
- ☐ Double adjuster, track bar 91235 (1)

**~Standard Front Track Bar~****#277 - XJ/ZJ Double Adjustable Track Bar Hardware (1)**

- ☐ Track bar bushing half 80014 (4)
- ☐ 12mm track bar bushing sleeve 92035 (1)
- ☐ 7/16" I.D. track bar bushing sleeve 92036 (1)
- ☐ Track bar clamp 92303 (2)
- ☐ M12-1.75 x 80 hex bolt (2)
- ☐ M12-1.75 hex nut (2)
- ☐ 7/16" x 2-1/2" hex bolt, gr8 (1)
- ☐ 7/16" Track Bar Flag Nut 91230 (1)
- ☐ 7/16" USS flat washer (5)

~Optional Front Track Bar~**#122 - Track Bar Flex End Hardware - 12mm (2)**

- ☐ Inner race (plastic) 91113 (2)
- ☐ End cap (steel) 91112 (2)
- ☐ Ball 91104 - M12 bolt (1)
- ☐ #5-40 x 1 1/4" Socket head cap screw (9)
- ☐ 3/32" Hex L key, high torque (hex plus) (1)

#277 - XJ/ZJ Double Adjustable Track Bar Hardware (1)

- ☐ Track bar bushing half 80014 (4)
- ☐ 12mm track bar bushing sleeve 92035 (1)
- ☐ 7/16" I.D. track bar bushing sleeve 92036 (1)
- ☐ Track bar clamp 92303 (2)
- ☐ M12-1.75 x 80 hex bolt (2)
- ☐ M12-1.75 hex nut (2)
- ☐ 7/16" x 2-1/2" hex bolt, gr8 (1)
- ☐ 7/16" Track Bar Flag Nut 91230 (1)
- ☐ 7/16" USS flat washer (5)

Shocks**Trail Tamer HD Hydro (Standard)**

- ☐ Front shock 79010 (2)
- ☐ Rear shock 79011 (2)

Doetsch Upgrade (Optional)

- ☐ Front shock DT 8421 (2)
- ☐ Rear shock DT 8403 (2)

#9 - DT Front Shock

- ☐ 2.5" Front shock barpin 403876 (2)

Bilstein Upgrade (Optional)

- ☐ Front shock 33-185569 (2)
- ☐ Rear shock 33-185569 (2)

#17 - Bilstein Shock Hardware (1)

- ☐ Front barpin 403876 (2)
- ☐ 12mm shock sleeve 404739 (4)
- ☐ SBL u-bracket 99000 (2)
- ☐ 1/2" x 1-1/2" hex bolt, gr8 (2)
- ☐ 1/2" hex nut, gr8 (2)

- ☐ 1/2" flat washer (2)
- ☐ 1/2" lock washer, gr8 (2)
- ☐ 7/16" USS flat washer (6)
- ☐ M12x60 hex bolt, cl10.9 (2)
- ☐ M12 hex nut, cl10.9 (2)

Rear axle truss customer specific:

<input type="checkbox"/> Optional: Dana 35 Truss 91222 (1)
<input type="checkbox"/> Dana 35 Truss Gusset 91223 (1)
<input type="checkbox"/> Axle mount UCA base 91169 (1)
<input type="checkbox"/> Axle mount UCA plate inner 91170 (2)
<input type="checkbox"/> Axle mount UCA plate outer 91171 (2)
<input type="checkbox"/> #184 - T-Block Eliminator 88263 (1)
<input type="checkbox"/> Optional: Dana 44A Truss 99148 (1)
<input type="checkbox"/> Dana 44A Truss Gusset 99151 (1)
<input type="checkbox"/> Axle mount base 91169 (1)
<input type="checkbox"/> Axle mount UCA plate inner 91170 (2)
<input type="checkbox"/> Axle mount UCA plate outer 91171 (2)
<input type="checkbox"/> #184 - T-Block Eliminator 88263 (1)
<input type="checkbox"/> Optional: Ford 8.8" Truss 85060 (1)
<input type="checkbox"/> Gusset Bracket 91224 (1)
<input type="checkbox"/> Axle mount base 91169 (1)
<input type="checkbox"/> Axle mount UCA plate inner 91170 (2)
<input type="checkbox"/> Axle mount UCA plate outer 91171 (2)
<input type="checkbox"/> Optional: Dana 60 Over Diff Cradle 88217 (1)
<input type="checkbox"/> Front Truss Plate 88218 (1)
<input type="checkbox"/> Rear Truss Plate 88219 (1)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)
<input type="checkbox"/> Optional: GM Corp. 14 Bolt Over Diff Cradle 91196 (1)
<input type="checkbox"/> Front Truss Plate 91197 (1)
<input type="checkbox"/> Rear Plate Left 91198 (1)
<input type="checkbox"/> Rear Plate Right 91199 (1)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)
<input type="checkbox"/> Optional: JK Dana 44 Over Diff Cradle 88217 (1)
<input type="checkbox"/> Front Truss Plate 88257 (1)
<input type="checkbox"/> Rear Truss Plate 88256 (1)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)
<input type="checkbox"/> Optional: Ford 9" Semi-Universal Truss 88266(1)
<input type="checkbox"/> Front Truss Plate 88269 (1)
<input type="checkbox"/> Rear Truss Plate 88270 (1)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)
<input type="checkbox"/> Optional: Universal Truss 88266 (1)
<input type="checkbox"/> Front/Rear Truss Plate 88268 (2)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)
<input type="checkbox"/> Optional: Sterling 10.5 Truss 88298 (1)
<input type="checkbox"/> Front Truss Plate 88310 (1)
<input type="checkbox"/> Rear Truss Plate 88311 (1)
<input type="checkbox"/> UCA Inner Plate 91200 (2)
<input type="checkbox"/> UCA Outer Plate 91201 (2)

Safety Warning: *Important! Read before installation. *****

This kit requires welding cutting and drilling IRO recommends that this system be installed by a qualified professional. Knowledge of suspension component function is necessary for safe installation and post installation inspections. Be sure to re-torque all suspension components and lug nuts after the first 100 miles of use, and regularly inspect all safety critical suspension components.

Before you begin:

- ☐ Read all safety warnings.
- ☐ Read and understand installation instructions.
- ☐ A custom exhaust system will be required.
- ☐ Check all steering and suspension components for wear and replace as needed.
- ☐ Contact Iron Rock Off Road with any questions before, during, or after installation.
- ☐ **Ensure that all parts are present and in good condition using the included parts checklist.**
- ☐ Be sure you have the following tools and supplies:
 - ☐ Floor jack and jack stands.
 - ☐ Basic hand tools (Sockets, ratchet, wrenches)
 - ☐ Paint (Spray paint, primer, etc.)
 - ☐ Multi-purpose grease.
 - ☐ Slope gauge or angle finder.
 - ☐ Hand drill with good quality 7/16" drill bit.
 - ☐ Anti-seize compound for bolts.
 - ☐ Torque wrench capable of 65 ft-lbs. and 125 ft-lbs.
 - ☐ Metal cutting tools (grinder, etc.)
 - ☐ Welder (for welding the truss to the axle).
 - ☐ 3/16 Double Flaring Tool for brake lines.
 - ☐ Tubing cutter for brake lines.
 - ☐ 3/8" flare nut wrench.
 - ☐ Carbide burr that fits inside a 7/16" hole
 - ☐ T55 Torx bit (rear track bar)
 - ☐ Hand Drill
 - ☐ 7/16" drill bit
 - ☐ String level or laser level



****NOTE****
To minimize downtime of your Jeep:
The front subframe can be installed without affecting the ability to drive your Jeep.



Installation Instructions:

Prepare the parts for installation:

1. **Shocks:** Grease and install the 5/8" I.D. shock bushings included with the shocks (if not already done).
2. Lubricate and install 12mm I.D. x 1.5" long inner sleeve into rear shocks at body end (bottom). Lubricate and install 10mm I.D. x 1.5" long inner sleeve into front shocks at body end (bottom). Install shock relocation brackets to bottom side of front shocks using M10 x 60mm bolts and nuts.
3. **Sway Bar Links:** Locate IRO Front Sway Bar Disconnect kit. Refer to the instructions at the end of this document.
4. **Track Bar:** Locate front track bar, track bar male threaded end, track bar bracket, double adjuster, and **HK #277**. Install clamps onto the double adjuster.
**If you upgraded to the Premium Track Bar refer to the instructions at the end of this document. Install flex joint into frame end of front track bar.
5. Apply anti-seize to all the threads then thread the track bar and male end into the double adjuster. Ensure the ends are equally threaded into the double adjuster then adjust the length to 33-3/4" center to center as a starting point.
6. Apply multi-purpose grease to both poly bushings and both inner bushing sleeves. Install bushings then sleeves into the track bar. The sleeve with the larger hole goes into frame side. (Longer end)




7. **Front Control Arms:** Locate the lower control arms (larger), male ends (larger, angled), **HK #127** and **181**.
8. Assemble flex ends into male ends. Use **HK #127** and attached instructions (2-5/8").
9. Locate the upper control arm (smaller), male end (smaller, straight), and **HK #168**.
10. Assemble flex end into upper control arm. Use **HK #168** and attached instructions (2-3/8"), install straight grease zerk.
11. Apply a light coat of anti-seize compound to the threads and thread the male ends into control arms.
12. Adjust control arm lengths per the chart.
13. Install clamping bolts from **HK #181**. Do not tighten at this time.
14. **Rear Control Arms:** Locate four control arms, male ends, and **HK #65, 127, and 168**.
15. Apply anti-seize to male threads and thread into the control arms. Larger male ends (angled) go into the larger (lower) control arms.
16. Assemble flex ends into lower control arms. Use **HK #127** and instructions (2-5/8").
17. Assemble flex ends into upper control arms. Use **HK #168** attached instructions (2-3/8").
18. Install clamping bolts. Do not tighten at this time.
19. With vehicle on level ground, measure pinion angle.
20. Record pinion angle here: _____

Control Arm Length (Starting Lengths - Center to Center)	
Front Lower Control Arms	36 1/2" (Short Side)
Front Upper Control Arm	37 1/4"
Rear Lower Control Arms	44" (Short Side)
Rear Upper Control Arms	36-1/2"

Front Control arm mounting subframe:


21. Lift front and rear of vehicle and support with jack stands under the uniframe. Leave room to cut off the stock lower control arm mounts.
22. Raise transfer case very slightly and support with a jack stand.
23. Remove the four transmission mount nuts from the transmission crossmember or the single bolt for the 2 hole subframe.
24. Remove the factory transmission mounting crossmember.
25. Locate the three subframe parts and **HK #180**.
26. Install left and right outers using the provided M10 flange bolts in the same holes that held the factory crossmember. Be sure that the control arm mounting pockets are facing forward.
27. Install center section using M10 x 25 carriage bolts and M10 nuts.
28. Tighten bolts firmly (bolts will be removed after drilling.)
29. Drill the 8 additional 7/16" mounting holes using the subframe as a guide.
30. Remove subframe center section then left and right outers. Remove any burrs and sharp edges around the holes. Clean, prime and paint any exposed metal.
31. **To make installation easier install upper control arm into left subframe outer;** use M14 x 90 bolt and torque to 135 ft-lbs. The threaded male end is installed at the subframe with the bend hanging down to clear the floor.
32. Install left and right outers using M10 flange and 7/16" bolts, flange nuts, and washers from **HK #180**.
33. If you have only one bolt mounting the transmission to the crossmember (2 hole) install provided 2 hole adapter bracket (large u-shaped bracket) inside the subframe center section. Use provided M10 flange bolts, washers, and nuts. Torque bolts to 50 ft-lbs.
34. Using M10 x 25 carriage bolts, 3/8" washers, and M10 nuts, assemble subframe center section to the outers (center section underneath the outers). *****The long side of the center section attaches to the left outer subframe.*****
35. If your transfer case will be dropped, then install provided transfer case drop spacers between the subframe outers and center section using the longer 50mm carriage bolts.
36. Torque 7/16 bolts to 65 ft-lbs. Torque M10 bolts to 31 ft-lbs.
37. Torque subframe center section bolts to 45 ft-lbs.
38. Lower the transfer case on to subframe.
39. For 4 bolt transmission mounts, install the four existing transmission mount nuts and to 24-36 ft-lbs.
40. For 1 bolt transmission mounts, install the factory bolt and nut and torque to 78 ft-lbs.

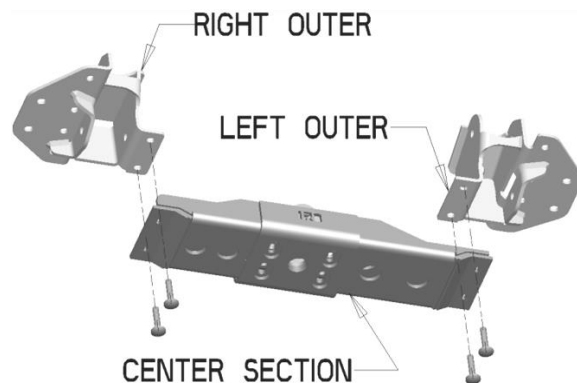

torque

Front Suspension:

41. Lift front of vehicle and support with tall jack stands under the unibody frame and remove front tires.
42. Support front axle with a floor jack (do not lift vehicle).
43. Remove front track bar and the bracket that attaches track bar to unibody. No need to separate the track bar from the bracket.
44. Remove front shocks, sway bar links, and allow the axle to droop as much as possible.
45. Remove front coil spring clamps and coil springs.
46. Remove upper and lower factory control arms.
47. Remove bump stop and bump stop cups.
48. Disconnect the driveshaft on the axle side and tape the u-joint so the caps do not fall off. Tie the driveshaft out of the way (use tape, zip tie, mechanic's wire, etc.) for easier access to the lower control arm mount.
49. Tie the new upper control arm out of the way.
50. Cut off factory lower control arm mounts from the uniframe on the driver's and passenger's side.
*****Tip: Our favorite tool for this is a 4-1/2" angle grinder with a thin cutting wheel. Remove in pieces for ease of access.*****
51. Remove anything on the driver's side that extends inward (toward the transmission) beyond the uniframe. Do not remove any of the uniframe, just make it one continuous edge from front to rear.
52. Clean up any burrs or sharp edges and grind smooth for an attractive appearance.
53. Clean, prime, and paint any exposed metal.
54. Connect the upper control arm to the axle using M10 x 80 bolt with washer and nylock flange nut. Do not tighten at this time.
55. Install Lower control arms with threaded adjusting end at the uniframe, and bends facing inward to clear the tires, thread clamping bolts facing down. At the subframe, use provided M14 x 110 bolts, 9/16" washers, and nylock nuts. At the axle, re-use factory cam bolts and nuts. Do not tighten at this time.
56. Locate **HK #128** front coil spring retainers (2" O.D. x 3" long plastic spacers). Apply anti-seize compound to provided M10 x 100mm bolts and install coil spring retainers between bump stop cup and unibody.
57. Install coil springs. Ensure coil spring is aligned to spring bucket on axle. Longer springs go in front.

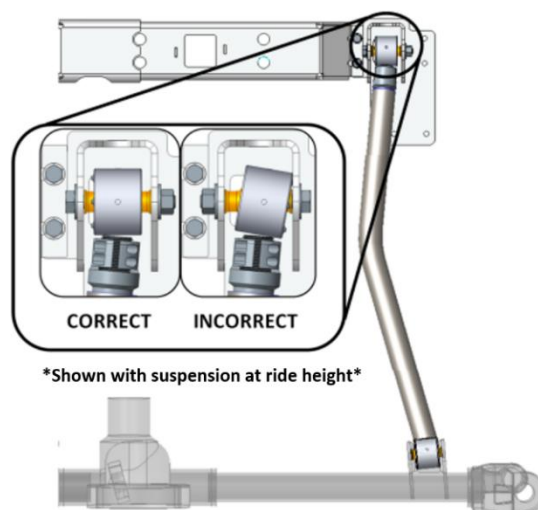


58. Locate front track bar, track bar mounting bracket, and **HK #277**.
59. Install the track bar bracket onto the unibody with the factory bolts. Loosely attach the bracket with the upper two bolts, then align the lower bolt mounting holes. Install the lower mounting bolts and torque all track bar bracket hardware to 92 ft-lbs.
*****NOTE:** If the unibody is rusty, the seam behind the factory bracket may have swelled making installation of the lower mounting bolts difficult. Using a ratchet strap to pull the bracket to align the holes or smoothing the seam with a hammer is recommended.
60. Install the track bar and torque bolt at axle to 74 ft-lbs., and bolt at bracket to 80 ft-lbs.
61. Orient track bar clamps to not interfere with any other components. Tighten track bar clamps to 60 ft-lbs.
62. Remove brake hoses and replace with supplied hoses. Rotate the hoses away from other items to ensure no rubbing or chaffing.
63. Locate front shocks, and remainder of **HK #33**.
64. Install front shocks using provided bolts. Tighten upper stud mount nuts just enough to slightly compress the bushings. *Note: Over compressing these bushings will result in damage to the bushings and premature bushing failure.
65. Torque shock relocation bracket bolts to 45 ft-lbs. and M10 shock bolt to 60 ft-lbs.
66. Remove drag link (goes from pitman arm to passenger side steering knuckle). Add a bend, just above where the tie rod connects. Bend roughly 5 degrees outward, or just enough to clear the sway bar mount while turning with the suspension fully drooped.
67. Ensure drag link bolts and any other steering bolts are tightened and cotter pins are installed.
68. Raise vehicle and reposition jack stands under the front axle.

Rear Disassembly:

69. Lift rear of vehicle and support with tall jack stands under the unibody frame.
*****Tip: break lug nuts loose before lifting vehicle.**
70. Ensure that the vehicle is safely supported.
71. Remove rear tires, shocks, sway bar links, and rear track bar (most ZJ's require a T55 Torx socket for the track bar bolts).
72. Remove catalytic converter, O2 sensor, muffler, and tailpipe. Cut just in front of the catalytic converter.
73. Remove rear driveshaft.
74. Remove Upper Control Arms.
75. Remove Lower Control Arms.
76. Disconnect rear brake hose from frame rail hard line.
77. Remove coil springs.
78. Remove rear axle assembly.


Prepare the Rear Axle Assembly:

79. Remove brake (hard) lines from rear brakes to T-block and remove T-block.
80. Cut off upper control arm and track bar brackets attached to the axle tubes. A plasma cutter, oxy/acetylene torch, or angle grinder with a cut off wheel can be used. Be careful not to cut into the axle tubes.
81. Using an angle grinder, remove any remaining bracketry. Be careful not to grind away any axle tube material.
82. Locate the axle centerline by measuring the same distance from each (left and right) wheel mounting surface or axle tube flange.

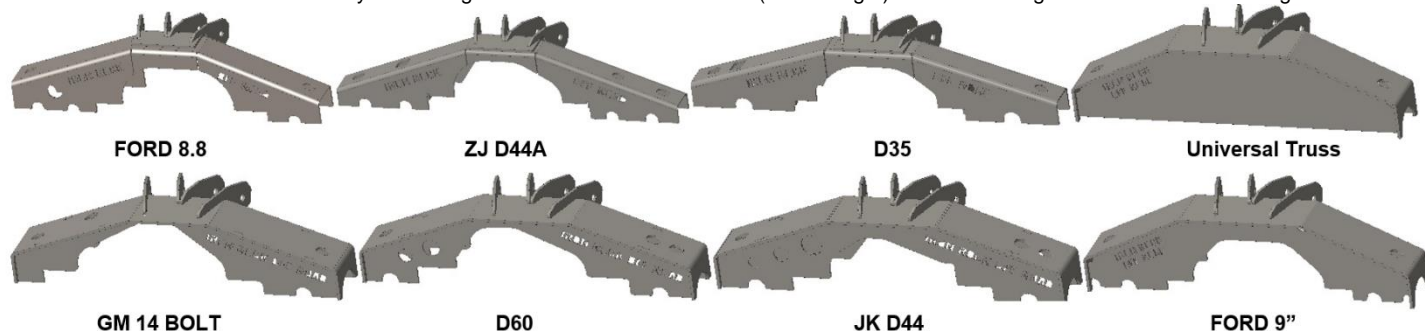

D35, D44A and Ford 8.8 Axle Trusses:


83. **If your axle is equipped with a brake line T-Block attached to the axle tube** Apply medium strength threadlocker to original brake line T-Block bolt and install T-Block Eliminator (#184) where the original brake line T-block was located on the axle.
84. Slide the internal gusset into the truss and test fit truss assembly to axle. The alignment hole should match the axle centerline and the internal gusset should rest on the axle tubes outside of the cast center section. Stich weld the gusset into the truss.
85. Fully weld the vertical slots in the truss (near the center). Tack weld the ends of the slots first to avoid warpage. Grind the front sides flush as needed to clear the Upper Control Arm (UCA) base plate.
86. With the truss cool, paint the inside of the truss including above and below the gusset to prevent rust.
87. Tack weld truss to the axle with the face of the truss parallel to rear diff cover mounting surface and the gusset resting on the axle tubes.

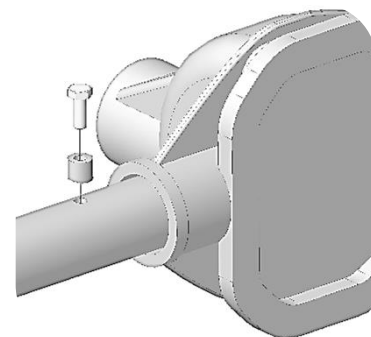


*****When tack welding, ensure your tack welds are strong enough for a test fit, but easy to cut apart if necessary.**

88. Tack weld upper control arm mount to truss with front hole aligned with hole in truss.
89. Tack weld upper control arm mount tabs to base plate with shorter tabs in the center.
90. Weld truss to axle and weld upper control arm mounts to truss.

*****To avoid warping, avoid excessive heat buildup. Weld in short time increments in one area then move to another part of the axle. Allow time to cool between welds in the same spot.**

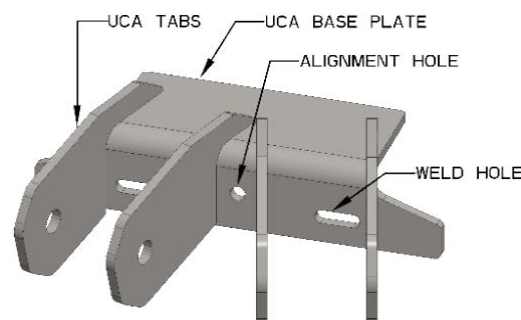


91. Weld all the way around UCA mounting tabs and UCA base plate.

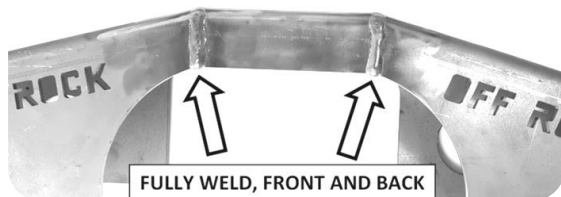

D60, GM14 Bolt, JK D44, Sterling 10.5, Ford 9" and Universal Blank Trusses:

92. Tack weld vertical truss plates to truss top plate. Vertical plates are inset 3/8" from outer edge of top plate. Test fit truss assembly to the axle. Ensure vertical plates contact axle tubes.
93. Tack weld truss to the axle with the face of the truss parallel to rear diff cover mounting surface and the top plate resting on the axle tubes.
*****When tack welding, ensure your tack welds are strong enough for a test fit, but easy to cut apart if necessary.**
94. Tack weld upper control arm mount tabs to truss with shorter tabs in the center. See diagram for dimensions.
95. Fully weld truss assembly, weld truss to axle and weld upper control arm mounts to truss.
*****To avoid warping, avoid excessive heat buildup. Weld in short time increments in one area then move to another part of the axle. Allow time to cool between welds in the same spot.**
96. Weld all the way around UCA mounting tabs.

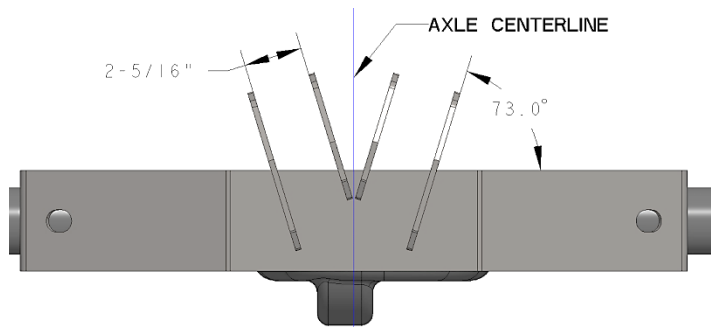


All Truss Options

97. Prep and paint the axle assembly.
98. Mount rear brake hose T-block to the axle truss with the flat side against the truss. Use 7/16" bolt and nut from **HK #147**.
99. Route provided brake lines from the T-block to rear brakes. Route in a location safe from hazards such as moving suspension components and trail obstacles such as rocks. Insert flare nuts before flaring and double flare per the instructions provided with your flaring tool.
100. Install flare nuts into brake hoses/brakes. Fully tighten.
101. Secure brake lines with cable ties or clamps as needed.


Rear Crossmember:

102. Locate subframe and **HK #174**.
103. With the control arm mounts facing the rear, position the subframe so that the front bolt hole is 17-3/8" back from the rear bolt for the factory front subframe.
104. Center subframe side to side.
105. Using the subframe as a template, drill all eight 7/16" holes. 2 of the holes may require use of a carbide burr to elongate an existing hole in the uniframe.
106. Remove subframe, deburr holes, prep and paint exposed metal.
107. Insert nut plates into frame. Be sure the offset in the rear nut plates clear the raised holes in the uniframe. Use mechanic's wire if needed to position the nut plates directly over the holes.
108. Raise subframe into position and secure with 7/16" bolts (4 holes per side).
109. Torque all bolts to 65 ft-lbs.

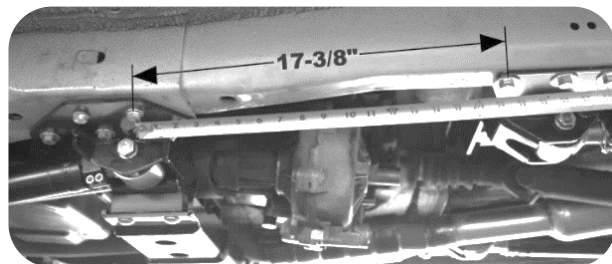

Rear Suspension:

110. Either cut off or bend the factory lower control arm mounts on the frame out of the way to make room for the new LCAs.
111. Install upper control arms with bend hanging down to clear the floor pan (adjustable threaded end at frame). Use M14 x 95 bolts, nylock flange nuts, and washers (from **HK #171**).
112. Install lower control arms. Adjustable threaded end at frame. Use M14 x 100 bolts, nylock flange nuts, and washers (from **HK #171**).
****Angled male ends to be angled towards the outside of the vehicle when installed (parallel to their mounting bracket). ****
****The control arm bends are to be angled upward for ground clearance, and inward to clear the frame. ****
113. Locate the 3" plastic cylinders and **HK #47**.
114. Install coil spring retainers onto rear upper coil spring perches. Place the washer with the square hole onto the 3/8 x 4 carriage bolt. At an angle, insert this assembly into the upper coil spring perch with the bolt hanging down.
115. Slide the coil retainer cylinder onto the bolt, followed by the oversized washer, next the standard washer, then the nut. Tighten nut.
116. Install new coil springs and sway bar links.
117. Install spacer from **HK #274** on upper rear shock stud then install rear shocks with shock body down. Torque upper nuts to 46 ft-lbs., and lower nuts to 80 ft-lbs.
118. Raise the vehicle and support with jack stands under the rear axle.

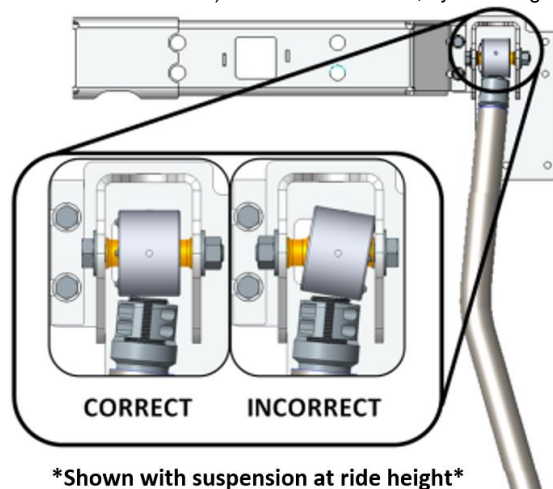

Shown with suspension at ride height


Adjustments and Final Inspection:

119. Check all components for clearance for suspension to fully cycle up and down. Pay special attention to brake lines, axle vent hoses, and ABS wires. Reposition as needed by bending the brackets, relocating, or extending hoses and wiring.
120. With full vehicle weight on the suspension, check if the rear axle is centered as desired in the wheel opening (front to rear). Adjust lower control arms to desired axle position. Adjust upper control arms to desired pinion angle (see step 22). Verify axle is centered left to right and adjust upper control arms as needed.

121. Check front caster angle. Using a laser level or string level, set the front axle level to the rear axle (left side and right) Bounce the Jeep up and down to ensure the suspension is in resting position (at exact ride height). Place the angle finder under the axle "C" (or on top of the upper ball joint). Ensure the angle finder is parallel to the Jeep front to rear. This is your caster angle. See chart for desired setting.
122. Adjust front control arms to the desired position.
 - To adjust axle front to rear, adjust upper and lower control arms by the same amount. 12 turns equal one inch.
 - To adjust only caster, adjust only the upper control arm (3 turns equals roughly 2 degrees).
 - To adjust both, adjust both at the same time.

***Caster angle may need to be adjusted after a test drive to eliminate driveline vibrations. ***
123. Ensure front axle is centered. Orient track bar clamps to not interfere with any other components. Tighten track bar clamps to 60 ft-lbs.
124. Torque lower control arm nuts and rear upper control arm nuts to 125 ft-lbs.
125. Torque Front upper control arm nut at axle to 60 ft-lbs.
126. Torque lower control arm clamping bolts to **140 in-lb**. Be sure to go back and forth between both bolts several times to ensure even clamping.
127. Install tires and wheels. Torque lug nuts to spec. (Typical specification is 85-115 ft-lbs., depending on your wheels)
128. Recheck all fasteners and torque any remaining loose nuts or bolts to spec.

Caster Angle (Starting point)	
Lift Height	Caster
3.5	7 degrees
4.5	5.5 degrees
5.5	4.5 degrees
7	3.5 degrees

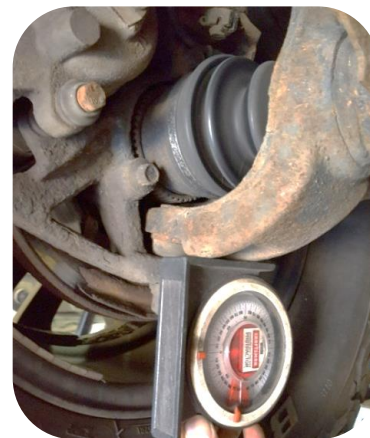

Check all components for clearance for suspension to fully cycle up and down and wheels to turn lock to lock. Pay special attention to brake lines, axle vent hoses, and ABS wires. Reposition as needed by bending the brackets, relocating, or extending hoses and wiring.

*** A professional front end alignment is required after installation. *** Recommended alignment settings:

Caster: +3.5 to +7.0 See chart

Toe-in: +1/16" to +1/8"


Final Safety Warning:

* Re-torque all fasteners including lug nuts after 100 miles, and frequently inspect all safety critical suspension components. It is the responsibility of the installer to be sure all fasteners are properly tightened after installation and to ensure the owner knows his/her ongoing responsibility. It is the responsibility of the owner of the vehicle to be sure all safety critical components are inspected frequently, especially after off road or other demanding use.





Recommended custom exhaust routing.

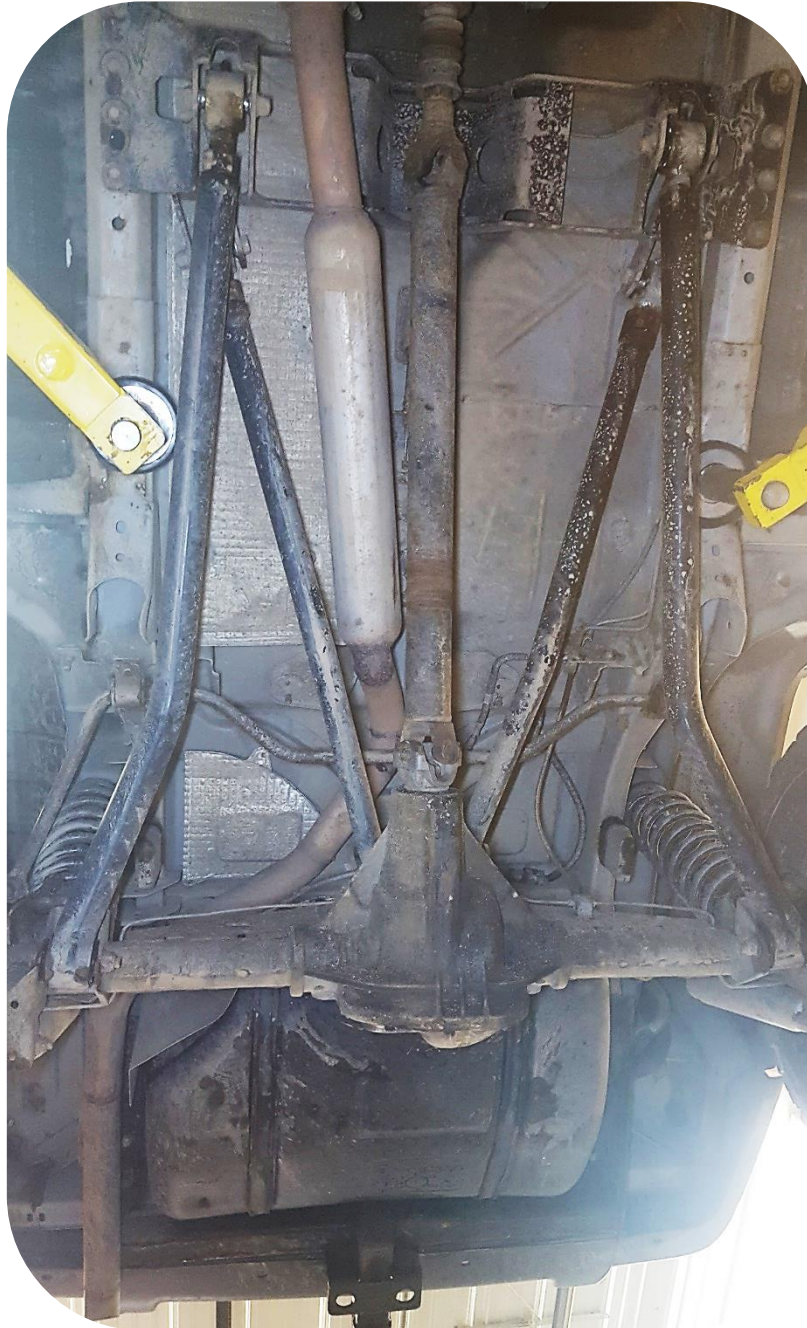

IRON ROCK OFF ROAD

2-5/8" IRO Flex End (6 bolt)
Assembly Instructions

1-877-919-JEEP www.ironrockoffroad.com

Fits All Iron Rock Off Road Long Arm Systems, WJ A-Arms, and Build Your Own Flex End Assemblies

Before you begin:

- ☐ Read and understand installation instructions.
- ☐ Contact Iron Rock Off Road with any questions before, during, or after installation.
- ☐ **Ensure that all parts are present and in good condition per attached shipping checklist!**
- ☐ Have these tools handy:
 - ☐ 5/32" Allen head socket
 - ☐ 3/8" open end wrench
 - ☐ Inch-lb. torque wrench
 - ☐ Multipurpose grease/grease gun

Parts Checklist:

- ☐ Outer housing, weld on (may already be attached to your existing control arm)
- #127 - 2-5/8" IRO Flex End (6 bolt)**
 - ☐ 2-5/8" flex end race 91118 (2)
 - ☐ Thrust washer 91119 (2)
 - ☐ 2-5/8" flex end ball 91117 (1)
 - ☐ #10-32 nylock nut (7)
 - ☐ #10-32 x 1-3/4" socket head cap screw (6)
 - ☐ 90° 1/4"-28 grease zerk fitting (1)

Assembly:

1. Insert two #10-32 socket head cap screws into one thrust washer and one plastic race. Spherical bore of race facing away from thrust washer. (Figure 1)
2. Install this small assembly into the flex end housing. The races are a light press fit, use a wide punch and hammer to assist you if needed.
3. Apply a thin coating of multi-purpose grease to the mating surfaces of the ball and both races.
4. Place the ball in the race (inside the flex end). The ball should perfectly fit the contour of the race. (Figure 2)
5. Insert the other race onto the ball so that the spherical bore is contacting the ball. Once again, the races are a light press fit, use a hammer and wide punch if needed. (The two screws should be through one washer and both races at this point)
6. Insert the second thrust washer on top of the flex end housing, sliding the bolts through the holes. (Figure 3)
7. Start nylock nuts on the two bolts that are in the flex end assembly. Hold the nut and turn the bolt.
8. Insert the remaining four cap screws through the remaining holes and install nuts. (Figure 4)
9. Snug up all of the bolts fairly tight.
10. Torque bolts evenly, starting at one bolt and continuing using a crisscross pattern. Torque all six bolts to 70 in-lbs., then to 85 in-lbs.
11. Install 90° grease zerk fitting so that it is easily accessed in the vehicle.
12. Grease flex end until grease comes out of the races around the ball.
13. Re-torque bolts to 85 in-lbs. after 5 minutes.

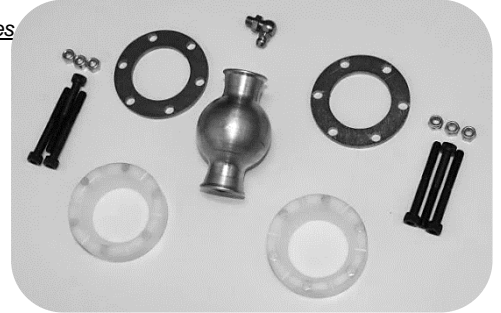


Figure 1

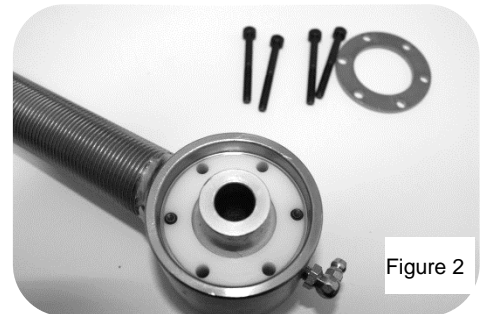


Figure 2



Reference Only Complete joint shown fully assembled without housing

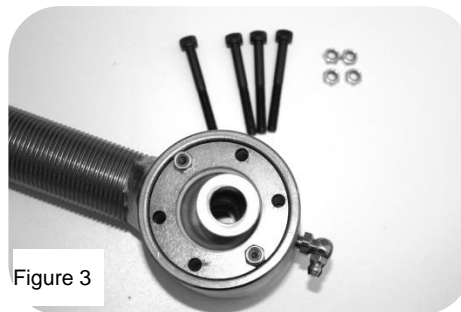


Figure 3



Figure 4

IRON ROCK OFF ROAD

2-3/8" IRO Flex End (8 bolt)
Assembly Instructions

1-877-919-JEEP www.ironrockoffroad.com

Before you begin:

- ☐ Read and understand installation instructions.
- ☐ Contact Iron Rock Off Road with any questions before, during, or after installation.
- ☐ **Ensure that all parts are present and in good condition per attached shipping checklist!**
- ☐ Have these tools handy:
 - ☐ 9/64" Allen head socket
 - ☐ 3/8" open end wrench
 - ☐ Inch-lb. torque wrench
 - ☐ Multipurpose grease/grease gun

Parts Checklist:

- ☐ Outer housing, weld on (may already be attached to your existing control arm)

#168 - 2-3/8" IRO Flex End (8 bolt)

- ☐ Inner race 91139 (2)
- ☐ Thrust washer 91138 (2)
- ☐ Ball 91140 (1)
- ☐ #8-32 x 1-1/2" socket head cap screw (8)
- ☐ 1/4"-28 90° grease zerk fitting (1)
- ☐ 1/4"-28 straight grease zerk fitting (1)



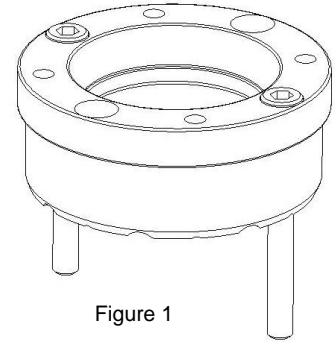


Figure 1


Assembly:

1. Insert two #8-32 socket head cap screws into one thrust washer and one plastic race. Spherical bore of race facing away from thrust washer. (Figure 1)
2. Install this small assembly into the flex end housing. The races are a light press fit, use a wide punch and hammer to assist you if needed.
3. Apply a thin coating of multi-purpose grease to the mating surfaces of the ball and both races.
4. Place the ball in the race (inside the flex end). The ball should perfectly fit the contour of the race.
5. Insert the other race onto the ball so that the spherical bore is contacting the ball. Once again, the races are a light press fit, use a hammer and wide punch if needed. (The two screws should be through one washer and both races at this point)
6. Insert the second thrust washer on top of the flex end housing, aligning the bolts with the threaded holes.
7. Start threading the two bolts into the threaded holes of the thrust washer. Do not fully tighten at this time.
8. Insert the remaining cap screws through the remaining holes and get them started in the threaded washer.
9. Snug up all of the bolts fairly tight. Go back and forth, rechecking each bolt several times ensure even clamping.
10. Torque bolts evenly starting at one bolt using a crisscross pattern, like torquing lug nuts. Torque all eight bolts to 50 in-lbs., then to 55 in-lbs.
11. Install 90° grease zerk fitting so that it is easily accessed in the vehicle.
12. Use a grease gun to grease the flex end through the zerk fitting. This will be difficult due to the tight tolerances in the flex joint assembly.
13. Re-torque bolts to 55 in-lbs.

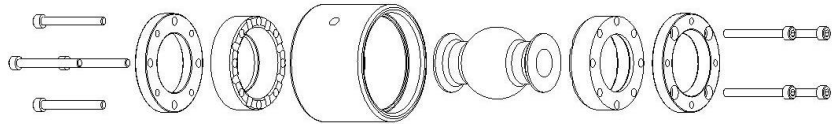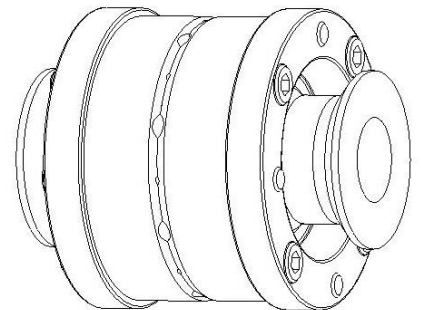

to

Reference Only Complete joint shown fully assembled without housing

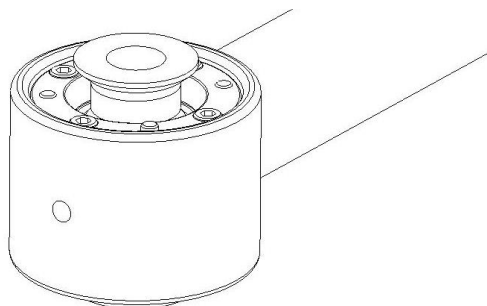

IRON ROCK OFF ROAD

Track Bar Flex End Assembly Instructions

I-877-919-JEEP www.ironrockoffroad.com


Parts Checklist:

#122 - Track Bar Flex End - 12mm (1)

- ☐ Inner race (plastic) 91113 (2)
- ☐ End cap (steel) 91112 (2)
- ☐ Ball 91104 – M12 bolt (1)
- ☐ #5-40 x 1 1/4" Socket head cap screw (9)
- ☐ 3/32" Hex L key, high torque (hex plus) (1)

#254 - Track Bar Flex End - 14mm (1)

- ☐ Inner race (plastic) 91113 (2)
- ☐ End cap (steel) 91112 (2)
- ☐ Ball 91142 – M14 bolt (1)
- ☐ #5-40 x 1 1/4" Socket head cap screw (9)
- ☐ 3/32" Hex L key, high torque (hex plus) (1)

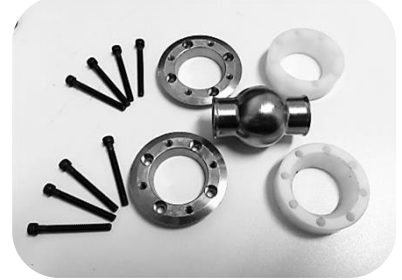

Safety Warning:

Installation and assembly of this part requires knowledge of steering and suspension systems. Failure to precisely adhere to installation procedure may cause a part failure resulting in vehicle damage and serious injury or death. This part only fits Iron Rock Off Road track bars in good condition. Iron Rock Off Road makes no claims that this part will fit track bars from other manufacturers. Improper fitment may cause a part failure resulting in vehicle damage, serious injury, or death.

Before you begin:

- ☐ Read and understand installation instructions.
- ☐ Contact Iron Rock Off Road with any questions before, during, or after installation.
- ☐ **Ensure that all parts are present and in good condition per attached shipping checklist!**
- ☐ Ensure that you have high strength threadlocker (such as red Loctite) and multi-purpose grease.

Fitment:

This kit replaces the poly bushings and inner sleeve in your Iron Rock Off Road track bar. This part only fits track bars manufactured by Iron Rock Off Road after 2009 with an inside diameter of 1.510", a width of 1.250", and a radiused inside corner.

*****To verify fitment: Remove the track bar from your vehicle, remove the poly bushings, clean the parts, and verify the following is true: *****

- ☐ The plastic races fit tight inside the inside bore.
- ☐ Both end caps fit the inside bore with just a bit of "wobble room".
- ☐ Both end caps slide in freely until the flat shoulder rests firmly against the end of the outer tube.
- ☐ The overall width of the outer tube is 1.250". This can be measured with a caliper or verified after flex end is fully assembled. Once fully assembled (bolts torqued to spec.) the shoulders of the end caps should rest firmly against the ends of the outer tube. At the same time, the ball should fit tight inside the assembly. It should require a tool (such as a screwdriver) to pivot or rotate the ball. The ball should pivot smoothly with even resistance in any position.



If any of those steps cannot be verified, please contact us to order a new track bar.

Bolt size: This bushing replacement assembly is only available to fit a 12mm & 14mm bolt at this time. Those with a 10mm fastener may wish to upgrade to 12mm hardware for more strength (drill your bracket and install a 12mm bolt).

Assembly:

1. Verify fitment per the "Fitment" section above.
2. Insert four socket head cap screws into one end cap and one race. (Race should have spherical bore facing away from end cap.)
3. Install this small assembly into the track bar outer bushing tube. The races are a light press fit, use a wide punch and hammer to assist you if needed.
4. Apply a thin coat of multi-purpose grease to the ball and the spherical mating surface of the races. Coat both mating surfaces but leave no excess grease that would interfere with the threadlocker adhesive on the bolts.
5. Place the ball into the race inside the housing. The ball should fit the contour of the race perfectly.
6. Insert the other race on top of the ball so that the spherical bore is contacting the ball. Once again, the races are a light press fit, use a hammer and wide punch if needed. (The four screws should be through one end cap and both races at this point.)
7. Apply a generous coating of high strength threadlocker (such as red Loctite) to all 8 screws (including the ones already installed).
8. Install the second end cap, aligning the screws with the tapped holes. When completed 4 screws will be inserted from each side.
9. Insert the last four screws and tighten them all snug.
10. Torque screws in sequence using a crisscross pattern, like torquing lug nuts. Tighten all 8 screws evenly in small steps. Take your time and do not rush. Tighten all 8 screws to 20 in/lbs.



IRON ROCK OFF ROAD

1-877-919-JEEP www.ironrockoffroad.com

Sway Bar Disconnect Links Instructions

Parts List:

#268 – Sway Bar Disconnect Bushings (1)

- ☐ Poly Bushing 94025 (4)


WJ ~Optional~

#267 – WJ Sway Bar Disconnect Hardware (1)

- ☐ Disconnect Pin 94028 (2)
- ☐ Spacer Sleeve 94032 (2)
- ☐ 1/2-20 x 2-1/2" Hex Bolt, gr8 (2)
- ☐ 1/2 F436 Hard Washer (2)
- ☐ 1/4" x 1-1/4" Spring Lynch Pin (2)

#288 – WJ Sway Bar Disconnect Sleeves (1)


- ☐ 12mm bushing sleeve 92038 (2)

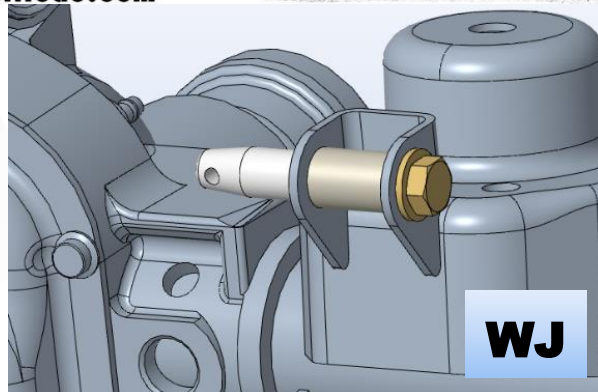

JK ~Optional~

#266 – JK Sway Bar Disconnect Hardware (2)

- ☐ Disconnect Pin 94028 (2)
- ☐ 1/2-20 x 1" Hex Bolt, gr8 (2)
- ☐ 1/2 F436 Hard Washer (2)
- ☐ 1/4" x 1-1/4" Spring Lynch Pin (2)

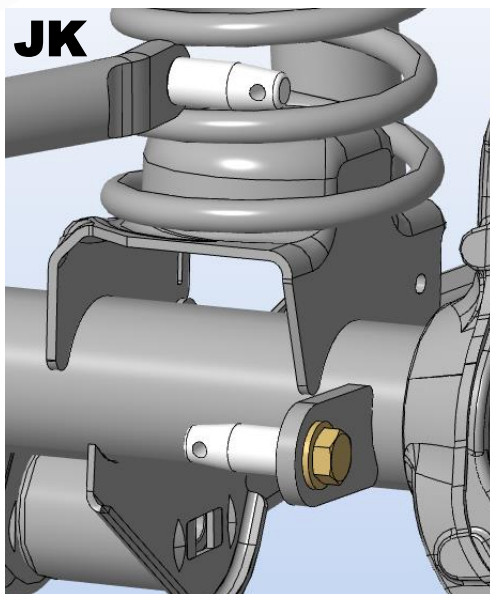

XJ ~Optional~

#287 – XJ Sway Bar Disconnect Hardware (1)



- ☐ Disconnect Pin 94028 (2)
- ☐ 1/2-20 x 1" Hex Bolt, gr8 (2)
- ☐ 1/2 F436 Hard Washer (2)
- ☐ 1/4" x 1-1/4" Spring Lynch Pin (2)
- ☐ 12mm bolt sleeve 92038 (2)
- ☐ M12 x 70 cl10.9 hex bolt (2)
- ☐ M12 cl10.9 hex nut (2)
- ☐ 1/2 x 1 1/2" gr8 hex bolt (2)
- ☐ 1/2 gr8 lock washer (2)
- ☐ 1/2 gr8 hex nut (2)
- ☐ U-Bracket 99000 (2)



TJ & ZJ ~Optional~

#286 – TJ & ZJ Sway Bar Disconnect Hardware (1)

- ☐ Disconnect Pin 94028 (2)
- ☐ 1/2-20 x 1" Hex Bolt, gr8 (2)
- ☐ 1/2 F436 Hard Washer (2)
- ☐ 1/4" x 1-1/4" Spring Lynch Pin (2)
- ☐ 12mm bolt sleeve 92038 (2)
- ☐ M12 x 60 hex bolt, cl10.9 (2)
- ☐ M12 hex nut, cl10.9 (2)
- ☐ M10 x 30 hex bolt, cl10.9 (2)
- ☐ 3/8" USS washer (2)
- ☐ M10 hex nut, cl10.9 (2)
- ☐ U-Bracket 99000 (2)

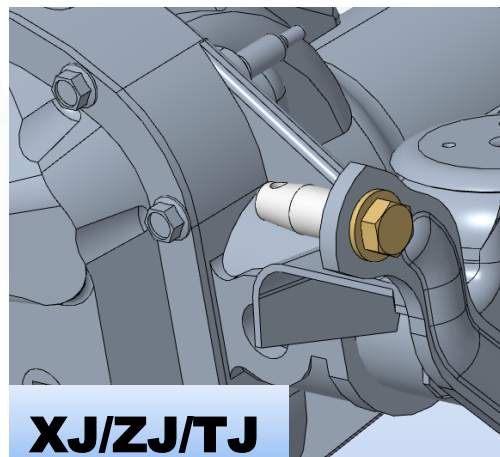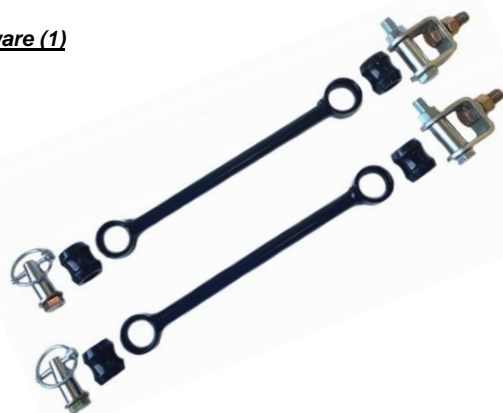

Installation Instructions:

Safety Warning: *Important! Read before installation. *

We recommend this system be installed by a qualified professional. Knowledge of suspension component function is necessary for safe installation and post installation inspections. Be sure to re-torque all suspension components after the first 100 miles of use, and frequently inspect all safety critical suspension components frequently.

Notes:

- ☐ Do not operate vehicle with only one side of the sway bar connected. Both sides of the sway bar must either be disconnected or both sides must be connected.

Before you begin:

- ☐ Read all safety warnings.
- ☐ Read and understand installation instructions.
- ☐ Contact Iron Rock Off Road with any questions before, during, or after installation. 952-210-7185
- ☐ **Ensure that all parts are present and in good condition using the included shipping checklist.**
- ☐ Be sure you have the following tools and supplies:
 - ☐ Floor jack and jack stands.
 - ☐ Basic hand tools (wrenches, sockets, etc.).
 - ☐ Multi-purpose grease

Prepare for installation:



1. Locate the front sway bar links, bushings, and bolt sleeves.
2. Grease and install the hourglass bushings.
3. Grease and install the sway bar link inner sleeves in only one end of each link.
4. Raise the vehicle and secure on jack stands under the frame.
5. Remove the front tires.
6. Disconnect the original front sway bar links from the axle and sway bar.

XJ Installation:

7. Locate front sway bar links, two u-brackets, and **HK #287**.
8. Install sway bar link u-brackets to the sway bar using 1/2 x 1-1/2" grade 8 hex bolts, lock washers, and nuts. Brackets mount to the bottom of the sway bar with the bolt facing up and the lock washer and nut on top of the sway bar. Rotate the bracket so it is offset away from the center of the vehicle. Align brackets, torque bolts to 80 ft-lbs.
9. Install sway bar links driver's side first using provided M12 x 60mm class 10.9 hex bolt and nut through the u-bracket with the nuts toward the outside of the vehicle. Tighten all bolts to 78 ft-lbs.
10. Install the disconnect pin on the axle, pin pointing in-board. Use the 1/2" x 1" bolt with a washer.
Tip: Before tightening determine your desired orientation for the retaining pin.
11. Hold the disconnect pin in your desired orientation and torque the bolt to 70lb-ft.
12. Apply grease to the disconnect pin and slide the sway bar link onto the disconnect pin.
13. Secure the sway bar link in place using the spring lynch pin.
***NOTE:** The spring lynch pin should take some effort to install. This is done on purpose to keep the link secure and noise free.
14. Reinstall tires and torque lug nuts to spec.
15. Lower vehicle to the ground.
16. With the vehicle back on the ground, pull the spring pins and slip the sway bar links off the disconnect pins.
17. Swing the sway bar links up to the sway bar then swing the sway bar up to its highest position.
18. Flex the suspension and steer fully left and right. Check for possible interference between the tires and sway bar.
19. Reconnect the sway bar links to the axle.
20. For ease of installation and best performance, re-grease the sway bar bushings periodically.

ZJ and TJ Installation:

21. Locate front sway bar links, two u-brackets, and **HK #286**.
22. Install sway bar link u-brackets to the sway bar using M10 x 30 hex bolts nuts and washers. Brackets mount to the bottom of the sway bar with the bolt facing up and the washer and nut on top of the sway bar. Align brackets with offset holes pushing the brackets toward the outside of the vehicle. Torque to 60 ft-lb.
23. Install sway bar links driver's side first using provided M12 x 60mm class 10.9 hex bolt and nut through the u-bracket with the nuts toward the outside of the vehicle. Tighten all bolts to 78 ft-lb.
24. Install the disconnect pin on the axle, pin pointing in-board. Use the 1/2" x 1" bolt with a washer.
Tip: Before tightening determine your desired orientation for the retaining pin.
25. Hold the disconnect pin in your desired orientation and torque the bolt to 70lb-ft.
26. Apply grease to the disconnect pin and slide the sway bar link onto the disconnect pin.
27. Secure the sway bar link in place using the spring lynch pin.
***NOTE:** The spring lynch pin should take some effort to install. This is done on purpose to keep the link secure and noise free.
28. Reinstall tires and torque lug nuts to spec.
29. Lower vehicle to the ground.
30. With the vehicle back on the ground, pull the spring pins and slip the sway bar links off the disconnect pins.
31. Swing the sway bar links up to the sway bar then swing the sway bar up to its highest position.
32. Flex the suspension and steer fully left and right. Check for possible interference between the tires and sway bar.
33. Reconnect the sway bar links to the axle.
34. For ease of installation and best performance, re-grease the sway bar bushings periodically.

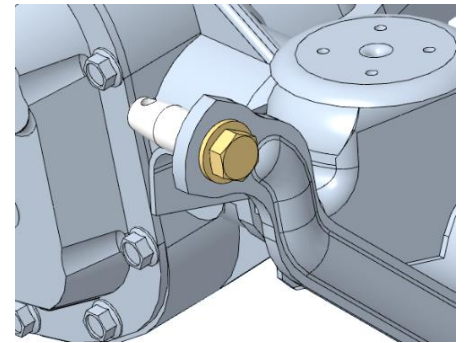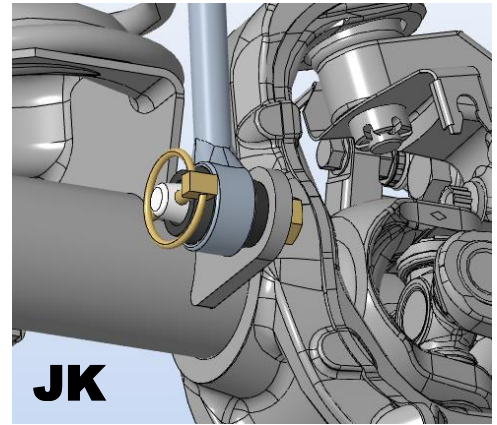


WJ Installation:

35. Install the sway bar links onto the sway bar using the original hardware.
36. Install the disconnect pin on the axle, pin pointing in-board, spacer sleeve inside the mount. Use the 1/2" x 2-1/2" bolt with a washer.
- Tip: Before tightening determine your desired orientation for the retaining pin.
37. Hold the disconnect pin in your desired orientation and torque the bolt to 70lb-ft.
38. Install the new bushings into your sway bar links using plenty of multi-purpose grease.
39. Reinstall your sleeves into the top of the sway bar link bushing using multi-purpose grease.
40. Reinstall your sway bar link onto the sway bar and torque the bolts to 70lb-ft.
41. Apply grease to the disconnect pin and slide the sway bar link onto the disconnect pin.
42. Secure the sway bar link in place using the spring pin.

***NOTE:** The spring pin should take some effort to install. This is done on purpose to keep the link secure and noise free.

43. Reinstall tires and torque lug nuts to spec.
44. Lower vehicle to the ground.
45. With the vehicle back on the ground, pull the spring pins and slip the sway bar links off the disconnect pins.
46. Swing the sway bar links up to the sway bar then swing the sway bar up to its highest position.
47. Flex the suspension and steer fully left and right. Check for possible interference between the tires and sway bar.
48. Reconnect the sway bar links to the axle.
49. For ease of installation and best performance, re-grease the sway bar bushings periodically.

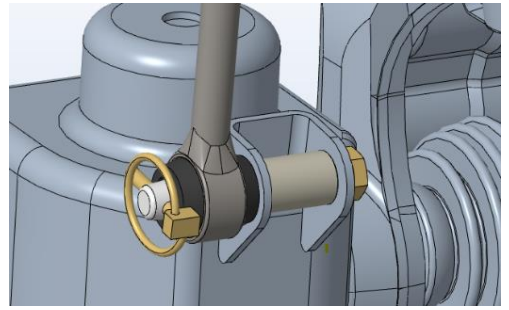


JK Installation:

50. Use a 1/2" drill bit to slightly enlarge the bolt hole in the sway bar. Only a very minor amount of material will be removed.
51. Install the disconnect pin on the axle, pin pointing in-board. Use the 1/2" x 1" bolt with a washer.
52. Install the disconnect pin on the sway bar, pin pointing out-board. Use the 1/2" x 1" bolt with a washer.
- Tip: Before tightening determine your desired orientation for the retaining pin.
53. Hold the disconnect pin in your desired orientation and torque the bolts to 70lb-ft.
54. Install the bushings into the sway bar links using plenty of multi-purpose grease.
55. Apply grease to the disconnect pins and slide the sway bar link onto the disconnect pins.

***NOTE:** Twist the passenger side link onto the lower pin first, then slide it onto the upper pin. It is a snug fit with the factory track bar bracket, but it is achievable.

56. Secure the sway bar link in place using the spring pins.
- *NOTE:** The spring pin should take some effort to install. This is done on purpose to keep the link secure and noise free.
57. Reinstall tires and torque lug nuts to spec.
58. Lower vehicle to the ground.
59. With the vehicle back on the ground, pull the spring pins and slip the sway bar links off the disconnect pins.
60. Swing the sway bar up to its highest position.
61. Flex the suspension and steer fully left and right. Check for possible interference between the tires and sway bar.
62. Reconnect the sway bar links to the axle.
63. For ease of installation and best performance, re-grease the sway bar bushings periodically.

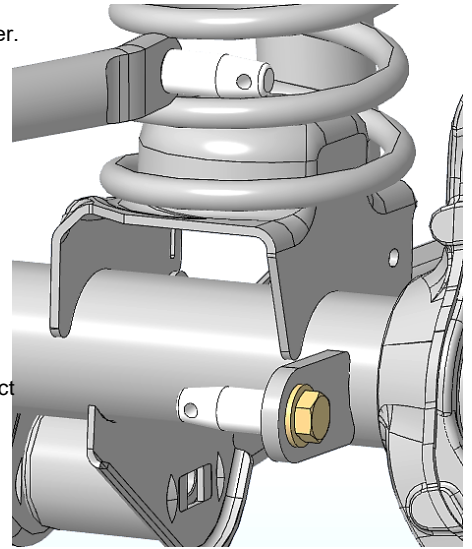

Final Safety Warning:

***Both sides of the sway bar must be disconnected. Do not operate vehicle with only one side of the sway bar connected.**

Re-torque all fasteners after 100 miles, and frequently inspect all safety critical suspension components. It is the responsibility of the installer to ensure all fasteners are properly tightened after installation and to ensure the owner knows his/her ongoing responsibility. It is the responsibility of the owner of the vehicle to be sure all safety critical components are inspected frequently, especially after off road or other demanding use.



IRON ROCK OFF ROAD


Bilstein Shock Installation Instructions

1-877-919-JEEP www.ironrockoffroad.com

Parts Checklist:

☐ Optional: #17 – ZJ Shock Hardware (1)

- ☐ Front barpin 403876 (2)
- ☐ 12mm Shock sleeve 404739 (4)
- ☐ SBL U-bracket 99000 (2)
- ☐ 1/2 x 1 1/2 Hex bolt, gr8 (2)
- ☐ 1/2 Hex nut, gr8 (2)
- ☐ 1/2 Flat washer (2)
- ☐ 1/2 Lock washer, gr8 (2)
- ☐ 7/16 USS Flat Washer (6)
- ☐ M12x60 Hex bolt, cl10.9 (2)
- ☐ M12 Hex nut, cl10.9 (2)

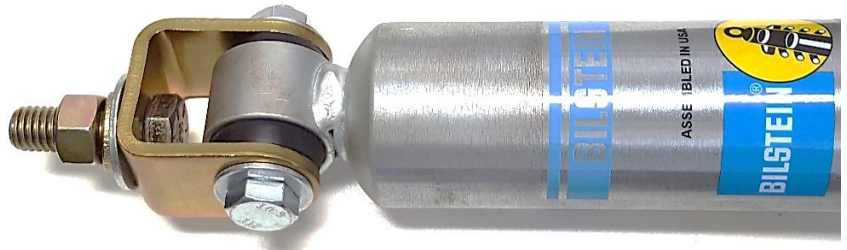

Before you begin:

- ☐ ***Ensure that all parts are present and in good condition using above shipping checklist. ***
- ☐ Read and understand all installation instructions.
- ☐ Tools required:
 - ☐ Basic hand tools
 - ☐ Multipurpose grease

Front Shocks Installation:

1. Remove factory front shocks. Note location of barpins and hardware location.
2. Lubricate barpin and bushing then install barpin into the bottom of front shocks. It helps to place the barpin in a vice facing up and lower the shock onto the barpin using a twisting motion. ****Bilstein text should be right side up when shocks are installed.**
3. Locate the U-bracket, 1/2 x 1-1/2" bolt, 1/2" washer, 1/2" lock washer and 1/2" hex nut.
4. Insert the 1/2 x 1-1/2" hex bolt into the U-bracket as shown. This bolt will replace the stud mount found on factory shocks.
5. Install the U-bracket into the upper shock mount with the large washer, lock washer and nut on the top side of the factory mount. The bracket is offset to push the shock away from the frame. Rotate the bracket for easy access to the shock mounting bolt and nut.
6. Install the front Bilstein shock (equal or shorter length) into the bracket with two 7/16" washers, M12x60 hex bolt and M12 hex nut as shown. *Note: some kits come with 4 matching length shocks, front and rear shock lengths could be equal.
7. Install front shocks into the lower shock mounts with factory hardware and tighten all fasteners.